

Advantech AE Technical Share Document

Date	2019/7/11	SR#	
Category	<input checked="" type="checkbox"/> FAQ <input type="checkbox"/> SOP	Related OS	N/A
Abstract	WISE-4210, the Definition of General Status for Modbus		
Keyword	SUB-G, Modbus		
Related Product	WISE-4210		

■ **Problem Description:**

This document will show you the definition of general status for Modbus.

■ **Answer:**

■ Resource value definitions :

For Push mode

Field	Abbreviation	Data Type	Property	Description								
Slot number	SLs	String	R	The slot ID of the device. (RF MAC)								
Modbus ID	Id	Number	R	The Modbus ID of the device. Range: 1~254, 0: Invalid								
RSSI	Rssi	Number	R	The RSSI value. Value range: 0 ~ -100								
Inactive time	Tm	Number	R	The inactive time of the device.								
Device Battery status	BR	Number	R	0: No error 1: Low battery 2: Run out of battery 3: No battery installed *Only support in WISE-4210 mode								
RTC Battery Low Voltage	LB	Number	R	0: no error. 1: Low battery occurs. *Only support in WISE-4210 mode								
Power source	Pw	Number	R	The power source supplied. <table border="1" style="margin-left: 20px;"> <thead> <tr style="background-color: #add8e6;"> <th>Bit</th> <th>Content</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Line power</td> </tr> <tr> <td>1</td> <td>Device battery</td> </tr> <tr> <td>2~15</td> <td>Reserved</td> </tr> </tbody> </table>	Bit	Content	0	Line power	1	Device battery	2~15	Reserved
Bit	Content											
0	Line power											
1	Device battery											
2~15	Reserved											
Main Battery Level	Val	Number	R	The percentage of the main battery level. 0~100 (%) *Only support in WISE-4210 mode								
Device status	RT	Number	R	0: The device is inactive. 1: The device is active.								