


## **SOP-PPC-155/175 Setting COM2 Function in BIOS**

Step 1 . When the computer booting , press Keyboard "**DELETE**" button, it will enter the BIOS settings page, as shown below.


Step 2 . Select "**Integrated Peripherals**", and then press "**Enter**" key to enter.

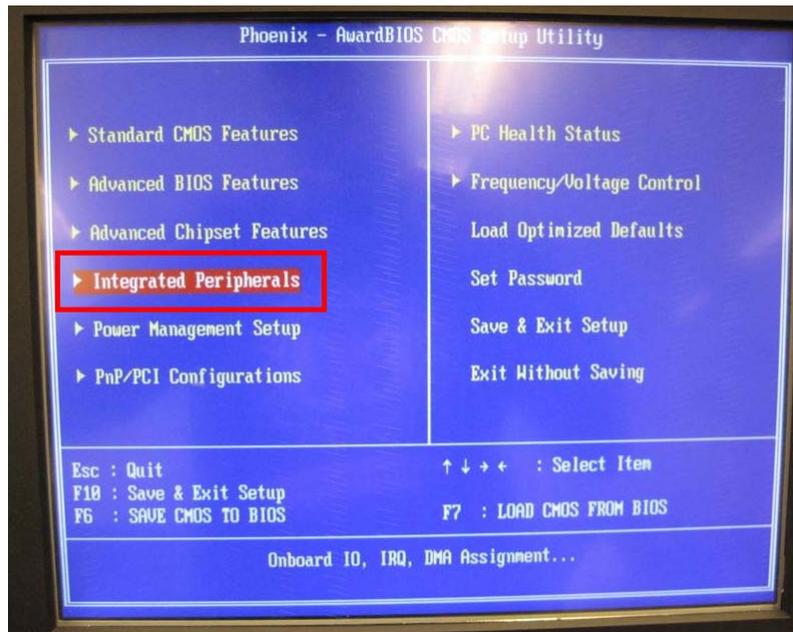

Step 3. Into the "**Integrated Peripherals**" page, index to move to "**COM2 Flow Control**", then press "**Enter**" key.

Note: "**Enabled**", meaning to open COM2 Auto-flow control function.

"**Disabled**", meaning to close COM2 Auto-flow control function.

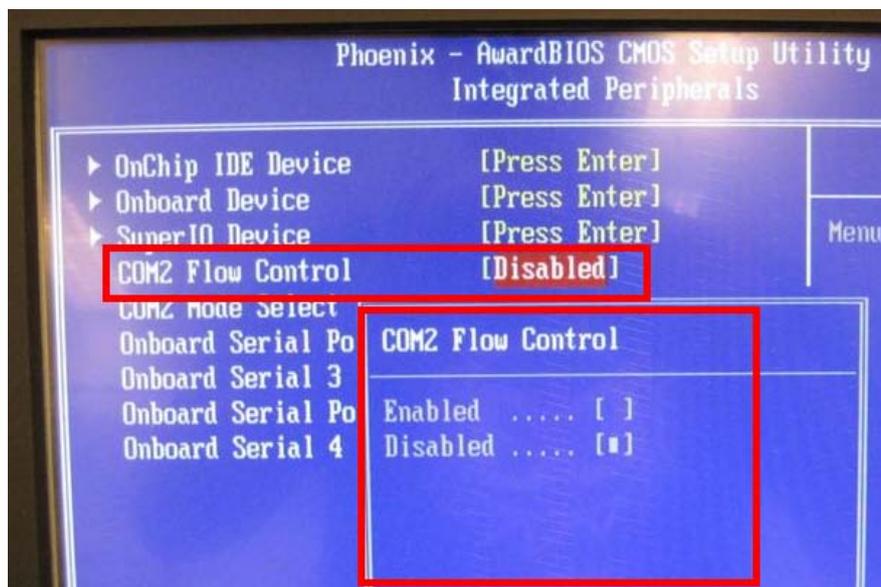


Step 4. Into the " **Integrated Peripherals** " page, index to move to " **COM2 Mode Select** ", then press "Enter" key.

Note: "RS232", meaning to use RS232 mode.

"RS485", meaning to use RS485 mode.

"RS422", meaning to use RS422 mode.

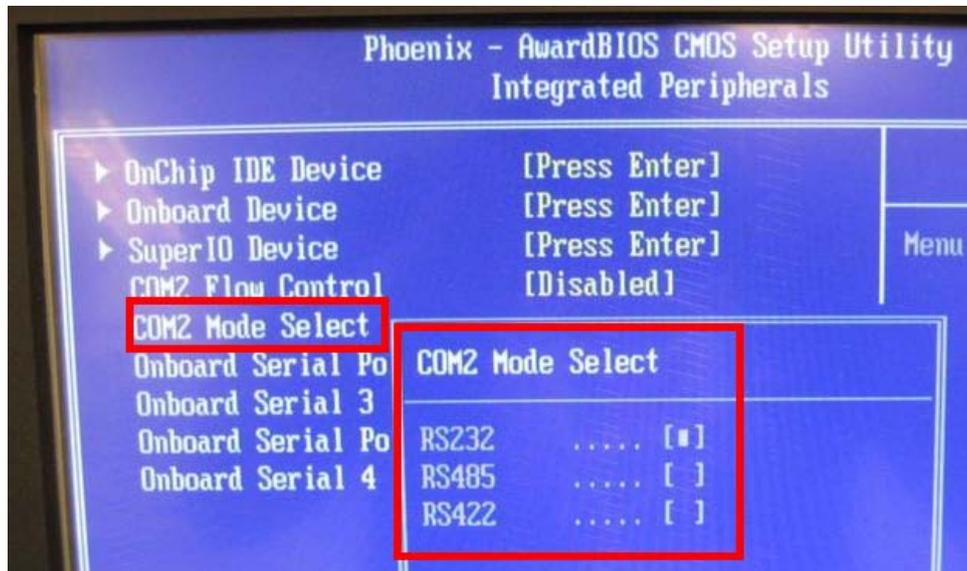

Step 5. The keyboard "F10" function key, save the settings and leave the BIOS settings page and complete the setup.