

Enabling an Intelligent Planet

Data Create	2015/04/07	Release Note	Internal External	
Category	FAQ	Product	IAG	
		Group	IAO	
Function	Teaming	Related OS	Windows7	
Related	UNO-3085G			
Product	010-3065G			

[Abstract]

How to enable Teaming Function while using intel's LAN chip

[Solution]

- 1. Make sure the LAN chip can support teaming function.
- 2. Go to device manager, select LAN chip and right-click to go into the property page.
- 3. Select Teaming page. Click New Team.

Gene		Boot Options			lanagement Resource
in	tel) Adapt	ter Teaming			
4	Leam this adap	ter with other ada	pters		
	Team			New Te	Nam
	No teams ava	lable	7	: Eropert	er
Allo	icipate in a team	oters ify whether a net . For an overview idapter is not part	of teaming	g. click here	
States					

4. There will be five modes available.



Enabling an Intelligent Planet

	Select a team type:	
	Adapter Fault Tolerance	
	Adaptive Load Balancing Static Link Aggregation IEEE 802.3ad Dynamic Link Aggregation Switch Fault Tolerance	
	Adapter Fault Tolerance	
-	Adapter Fault Tolerance (AFT) provides redundancy through automatic failovers from an active adapter to a standby adapter in the case of switch port, cable, or adapter failure.	(8
	One adapter is selected to be the active adapter. All other adapters are in standby.	
100	Primary and Secondary adapters can be selected for the team, but are not required.	
	If a Drimary adapter is chosen it becomes the active	7

5. If you choose Adaptive Load Balancing, You can click Property's "Test Switch" to make sure Adaptive Load Balance is working or not.



