

Advantech AE Technical Share Document

Date	2015 / 04 / 16	SR#	
Category	■ FAQ □ SOP	Related OS	N/A
Abstract	HOW TO ENALBE PXE ON UNO-2178A(AMIBIOS)/UNO-2184G(AWARD BIOS)		
Keyword	PXE/ UNO-2178A/ UNO-2184G		
Related Product	UNO-2178A/ UNO-2184G		

■ Problem Description:

HOW TO ENALBE PXE ON UNO-2178A(AMIBIOS)/UNO-2184G(AWARD BIOS)

■ Brief Solution - Step by Step:

At first, your end device has to connect with PXE server in the same network.

UNO-2178A(AMIBIOS)

1. Enter BIOS
2. Chipset -> South Bridge Configuration -> LAN Boot ROM -> Select [LAN1/LAN2](#)
3. F10 (save and exit)
4. Press 'shift + F10' during system prompt "Realtek ...", then enter realtek configuration.
5. Boot Order -> [Int 19h](#)
6. Show Message Time-> [5 sec](#)
7. Reboot
8. Enter bios
9. Boot -> Boot Setting Configuration -> Interrupt 19 Capture -> [Enable](#)
10. F10 (save and exit)
11. Enter PXE boot menu (done)

UNO-2184G(AWARD BIOS)

1. Enter BIOS
2. Save and Exit -> Boot Override -> IBA GE Slot xxxx v1365
3. Enter PXE boot menu (done)

■ Reference:

N/A