

Advantech AE Technical Share Document

Date	2020 / 01 / 21	Release Note	■ Internal □ External
Category	□ FAQ ■ SOP	Related OS	Windows 10
Abstract	Activate BCR Procedure		
Keyword	AIM-55, BCR, Win10		
Related Product	AIM-55		

■ Problem Description:

When customer pressed the button F, the BCR is not activated, however, the tablet's volume will be (un)muted.

■ Preparation:

1. USB Disk



2. USB Keyboard



3. Micro USB to USB Female (OTG cable)




4. USB Hub




■ **Brief Solution - Step by Step:**

1. Use the microUSB hub to connect the tablet and insert the keyboard to the hub, **and then press [ESC] after power on. Then Go to the [Setup Utility].**

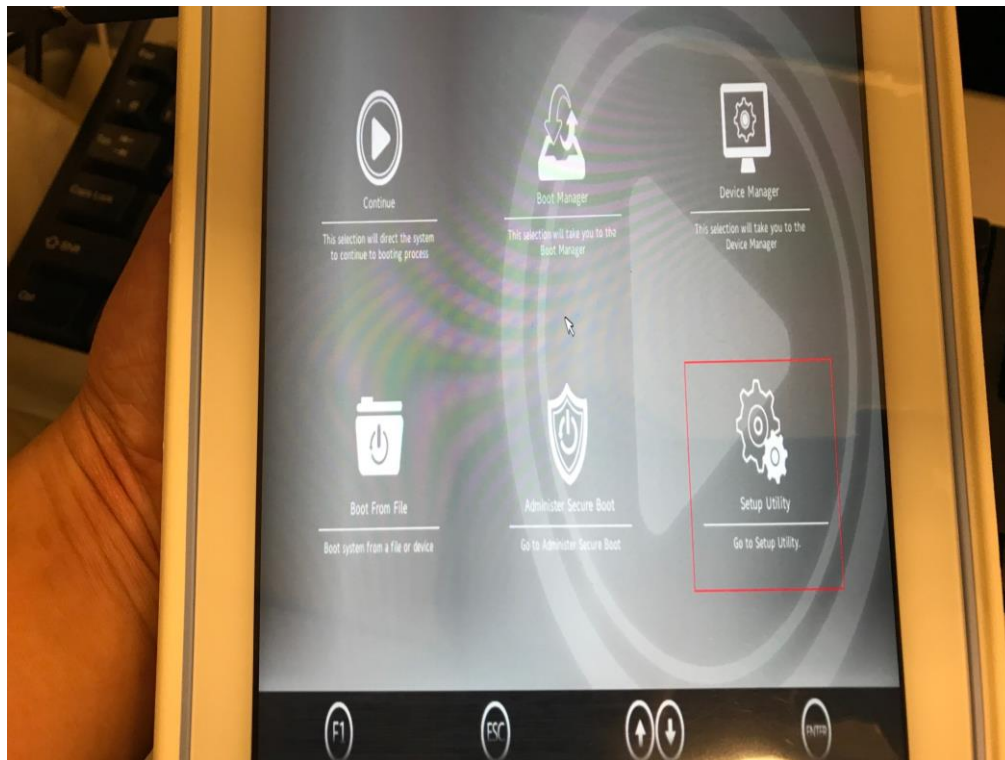


Picture1: Go into BIOS and then go to [Setup Utility].

2. Go to **[Advanced]** and then choose **[Boot Configuration]**.

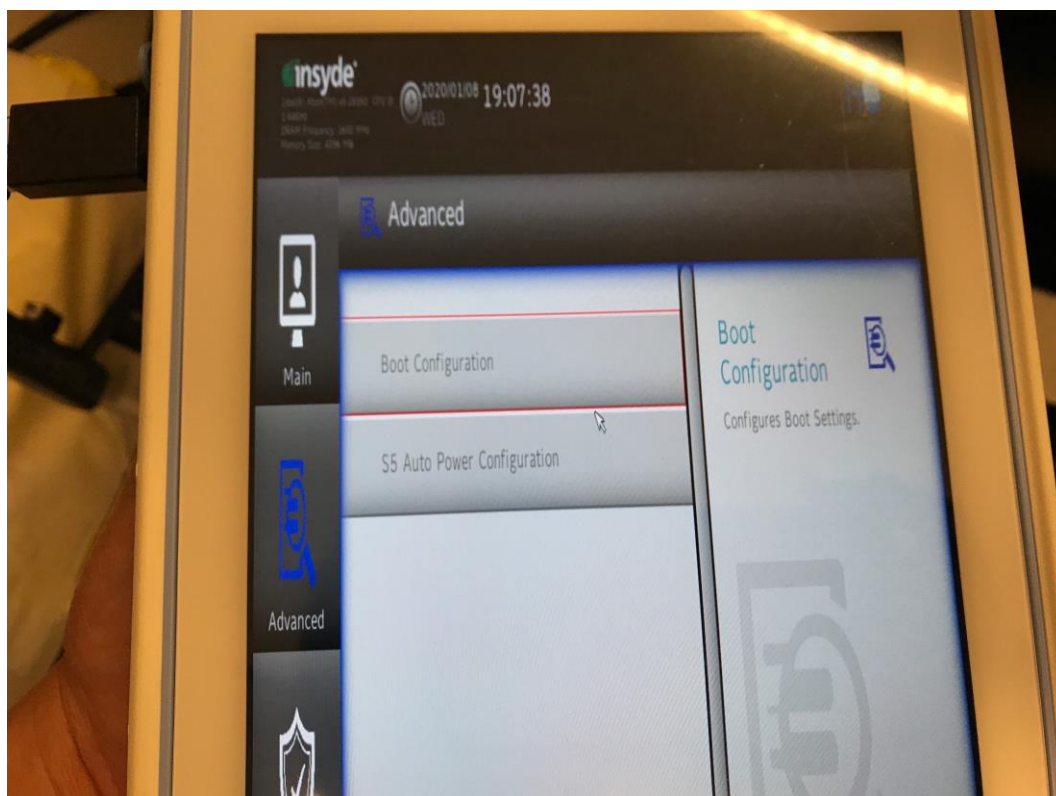


Picture2: Go to [Boot Configuration].

3. Go into **[Programable Key Enable]**

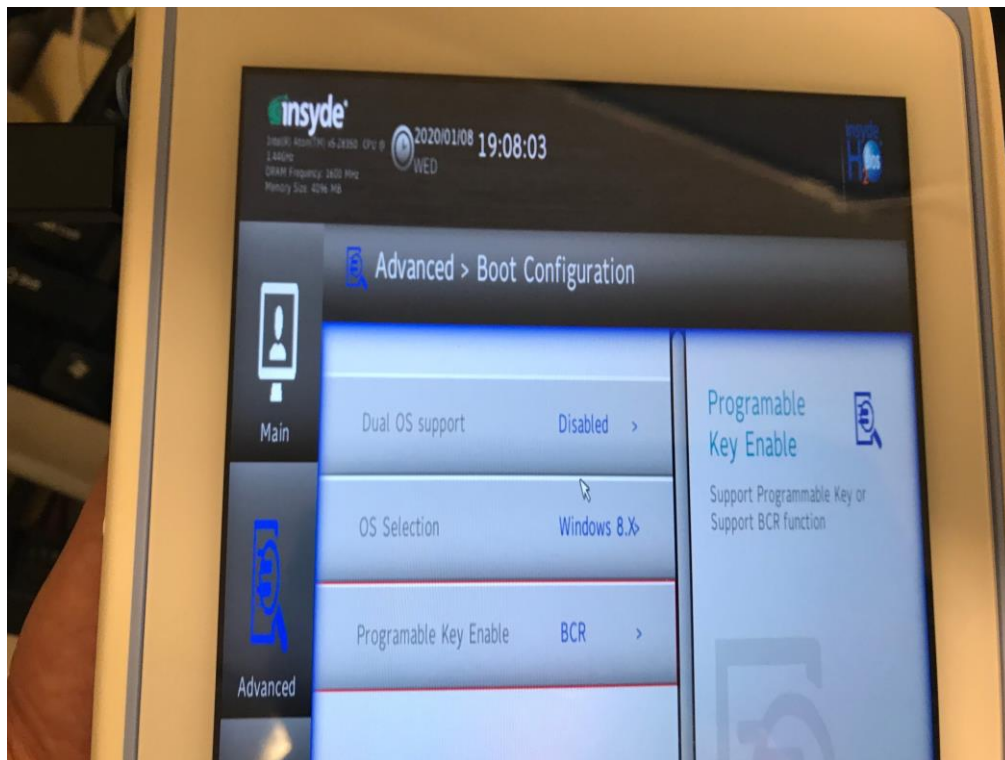


Picture3: [Programable Key Enable].

4. Choose **[BCR]**.

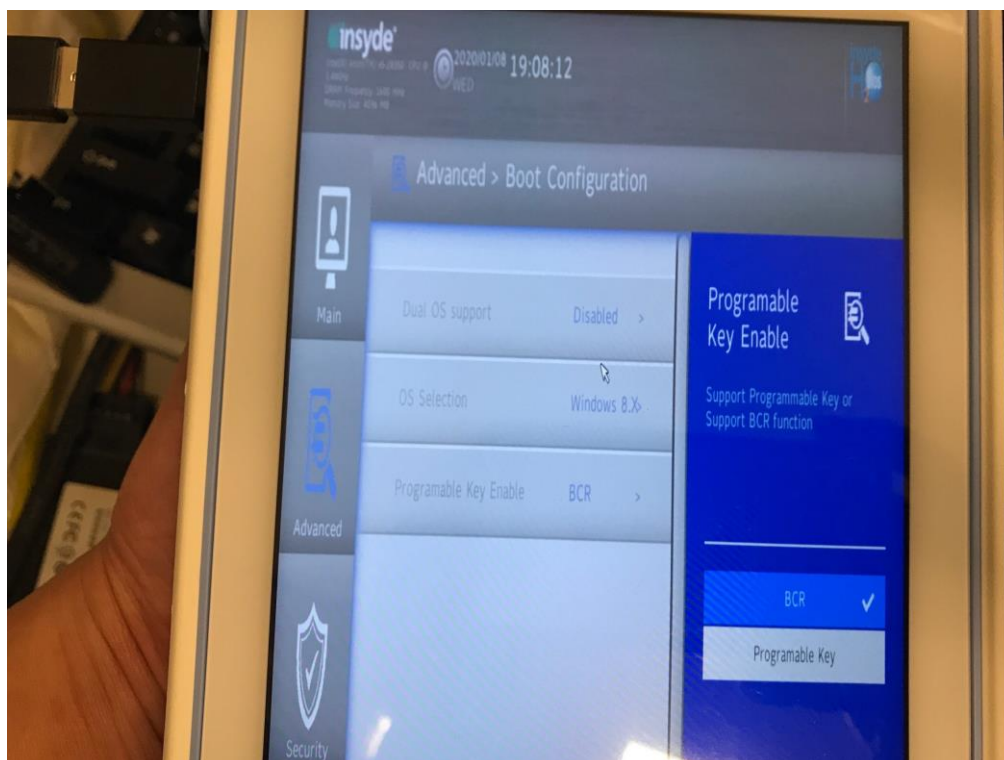

Picture4: [BCR].

5. Press **[F10]** and then **[YES]**, it will auto reboot, and it finish.

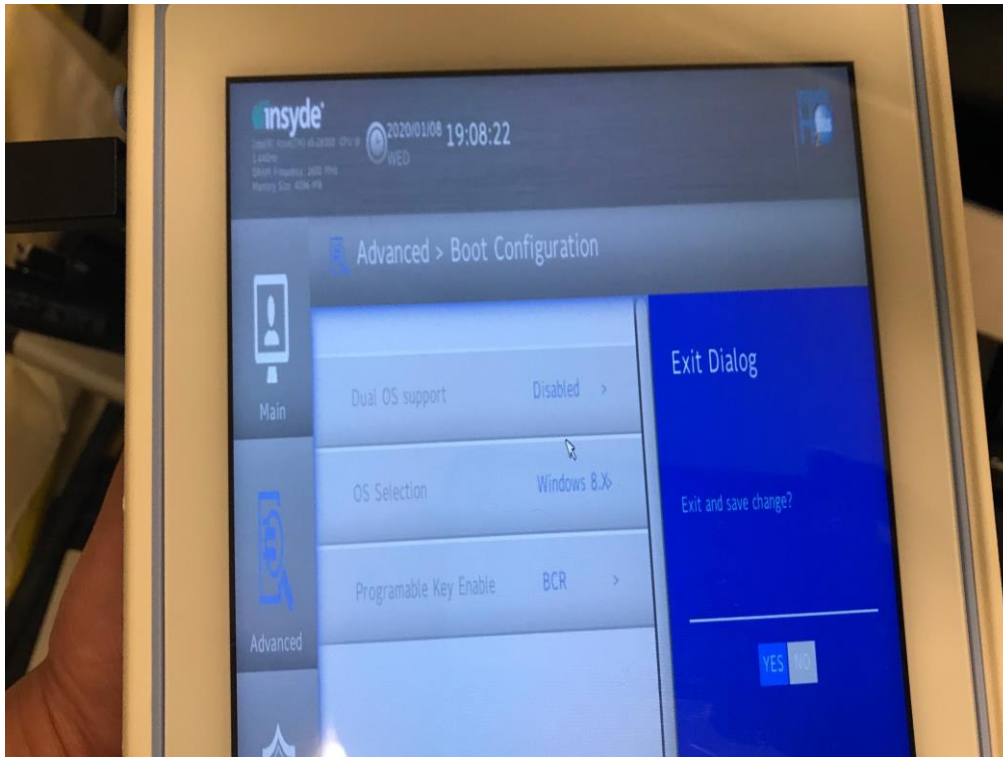

Picture5: Save and Exit.

■ Reference:

1. ADVANTECH Website – [AIM-55](#)

■ Contact Window and File Link:

If you have any questions, please contact Allen23.Chen #7724

You can download this file on [Global AE SharePoint - FAQ](#)

Contact Window and File Link:

You can download this file on [Global AE SharePoint - FAQ](#)

You can download this file on [Global AE SharePoint - SOP](#)