


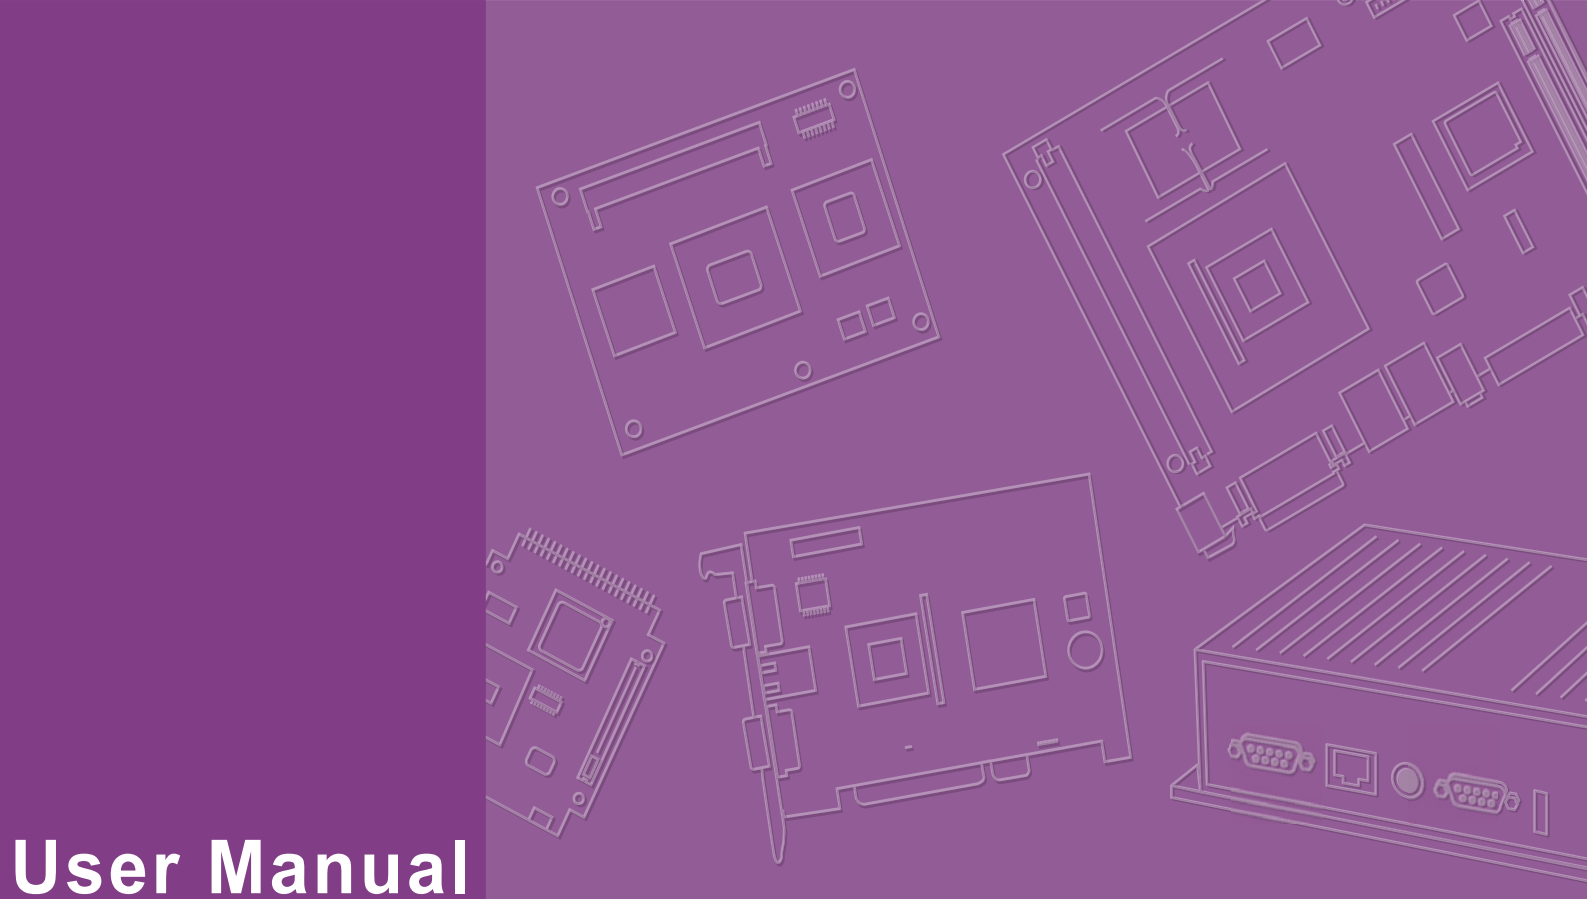

# User Manual

## SOM-5894

**ADVANTECH**

*Enabling an Intelligent Planet*

---

## Copyright

The documentation and the software included with this product are copyrighted 2013 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

## Acknowledgements

AMD is a trademark of Advanced Micro Devices, Inc.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

## Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

# Declaration of Conformity

## CE

This product has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the product from being damaged by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

## FCC Class B

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FM

This equipment has passed the FM certification. According to the National Fire Protection Association, work sites are classified into different classes, divisions and groups, based on hazard considerations. This equipment is compliant with the specifications of Class I, Division 2, Groups A, B, C and D indoor hazards.

# Technical Support and Assistance

1. Visit the Advantech website at <http://support.advantech.com> where you can find the latest information about the product.
2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
  - Product name and serial number
  - Description of your peripheral attachments
  - Description of your software (operating system, version, application software, etc.)
  - A complete description of the problem
  - The exact wording of any error messages

---

## Warnings, Cautions and Notes

**Warning!** *Warnings indicate conditions, which if not observed, can cause personal injury!*



**Caution!** *Cautions are included to help you avoid damaging hardware or losing data. e.g.*



*There is a danger of a new battery exploding if it is incorrectly installed. Do not attempt to recharge, force open, or heat the battery. Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.*

**Note!** *Notes provide optional additional information.*



## Document Feedback

To assist us in making improvements to this manual, we would welcome comments and constructive criticism. Please send all such - in writing to: [support@advan-tech.com](mailto:support@advan-tech.com)

## Packing List

Before setting up the system, check that the items listed below are included and in good condition. If any item does not accord with the table, please contact your dealer immediately.

- SOM-5894 CPU module
- 1 x Heatspreader (1960058957N001)

# Safety Instructions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the equipment.
  - The equipment has been exposed to moisture.
  - The equipment does not work well, or you cannot get it to work according to the user's manual.
  - The equipment has been dropped and damaged.
  - The equipment has obvious signs of breakage.
15. **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20° C (-4° F) OR ABOVE 60° C (140° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.**
16. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**

The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

---

## Safety Precaution - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

- To avoid electrical shock, always disconnect the power from your PC chassis before you work on it. Don't touch any components on the CPU card or other cards while the PC is on.
- Disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.

# Contents

|                   |                                                   |           |
|-------------------|---------------------------------------------------|-----------|
| <b>Chapter 1</b>  | <b>General Information .....</b>                  | <b>1</b>  |
| 1.1               | Introduction .....                                | 2         |
| 1.2               | Specifications .....                              | 2         |
| 1.2.1             | Board Information .....                           | 2         |
| 1.2.2             | System Information .....                          | 2         |
| 1.2.3             | Display .....                                     | 3         |
| 1.2.4             | Expansion Interface .....                         | 3         |
| 1.2.5             | I/O .....                                         | 4         |
| 1.2.6             | iManager 2.0 .....                                | 4         |
| 1.2.7             | Mechanical and Environmental Specification .....  | 4         |
| 1.3               | Functional Block Diagram .....                    | 5         |
| <b>Chapter 2</b>  | <b>Mechanical Information .....</b>               | <b>7</b>  |
| 2.1               | Board Information.....                            | 8         |
|                   | Figure 2.1 Board Chips Identify - Front.....      | 8         |
|                   | Figure 2.2 Board Chips Identify - Back .....      | 8         |
| 2.2               | Mechanical Drawing.....                           | 9         |
|                   | Figure 2.3 Board Mechanical Drawing - Front ..... | 9         |
|                   | Figure 2.4 Board Mechanical Drawing - Back .....  | 9         |
| 2.3               | Assembly Drawing .....                            | 10        |
|                   | Figure 2.5 Assembly Drawing.....                  | 10        |
|                   | Figure 2.6 Heatspreader Pre-Assembly .....        | 10        |
| 2.4               | Main Chips Height.....                            | 11        |
|                   | Figure 2.7 Main Chips Heights and Tolerance ..... | 11        |
| <b>Chapter 3</b>  | <b>AMI BIOS .....</b>                             | <b>13</b> |
| 3.1               | Introduction .....                                | 14        |
|                   | Figure 3.1 BIOS Setup Utility Main Screen.....    | 14        |
| 3.2               | Entering Setup .....                              | 15        |
| 3.3               | Hot / Operation key .....                         | 15        |
| 3.3.1             | Left / Right Key .....                            | 15        |
| 3.3.2             | ESC key .....                                     | 15        |
| 3.3.3             | Enter Key .....                                   | 15        |
| 3.3.4             | + / - key .....                                   | 15        |
| 3.3.5             | F1 key .....                                      | 15        |
| 3.3.6             | F2 key .....                                      | 15        |
| 3.3.7             | F3 key .....                                      | 15        |
| 3.3.8             | F4 key .....                                      | 15        |
| 3.4               | Exit BIOS Setup Utility .....                     | 15        |
| <b>Chapter 4</b>  | <b>S/W Introduction &amp; Installation .....</b>  | <b>17</b> |
| 4.1               | S/W Introduction.....                             | 18        |
| 4.2               | Driver Installation .....                         | 18        |
| 4.2.1             | Windows Driver Setup .....                        | 18        |
| 4.2.2             | Other OS.....                                     | 18        |
| 4.3               | Advantech iManager .....                          | 19        |
| <b>Appendix A</b> | <b>Pin Assignment .....</b>                       | <b>21</b> |

---

|                   |                                          |           |
|-------------------|------------------------------------------|-----------|
| A.1               | SOM-5894 Type 6 Pin Assignment.....      | 22        |
| <b>Appendix B</b> | <b>Watchdog Timer.....</b>               | <b>27</b> |
| B.1               | Programming the Watchdog Timer .....     | 28        |
| <b>Appendix C</b> | <b>Programming GPIO.....</b>             | <b>29</b> |
| C.1               | GPIO Register.....                       | 30        |
| <b>Appendix D</b> | <b>System Assignments.....</b>           | <b>31</b> |
| D.1               | System I/O Ports.....                    | 32        |
|                   | Table D.1: System I/O Ports .....        | 32        |
| D.2               | DMA Channel Assignments .....            | 33        |
|                   | Table D.2: DMA Channel Assignments ..... | 33        |
| D.3               | Interrupt Assignments .....              | 33        |
|                   | Table D.3: Interrupt Assignments .....   | 33        |
| D.4               | 1st MB Memory Map.....                   | 34        |
|                   | Table D.4: 1st MB Memory Map .....       | 34        |

# Chapter 1

## General Information

This chapter gives background information on the SOM-5894 CPU Computer on Module.

Sections include:

- Introduction
- Specification
- Functional Block Diagram

## 1.1 Introduction

SOM-5894 is a COM-Express Basic module with pin-out Type 6 that fully complies with the PICMG (PCI Industrial Computer Manufacturers Group) COM.0 R2.1 specification. The CPU module incorporates an Intel 4th Generation Core i processor, PCH QM87, and other peripheral chips. The Intel latest processor uses 22nm and 3D Tri-gate transistor technologies that brings 13% performance improvement over previous versions, and integrates a powerful Intel HD Graphic 4600 as well as DX11.1, OpenCL1.2, OpenGL4.0 API enabling better display configurations with no bandwidth limitations. With Intel PCH QM87, SOM-5894 provides advanced interfaces such as PCI Express Gen 3, SATA Gen 3, and USB3.0. Moreover, PCIe x16 can be used in combination of x4 or x8 to make it more flexible.

Advantech iManager 2.0 was invented to satisfy a lot of embedded application requirements such as multi-level watchdog timer, voltage and temperature monitoring, thermal protection and mitigation through processor throttling, LCD backlight on/off and brightness control, and embedded storage. Combining Advantech SUSI Access, it can remotely monitor and control devices via the internet for easy maintenance. All Advantech COM Express modules integrate iManager and SUSI Access to benefit our customer's applications.

With top performance and lower power consumption, various extensions and I/O interfaces, SOM-5894 is suitable for computing intensive design, thermal sensitive design, graphics/media insensitive design, and I/O demanding applications.

## 1.2 Specifications

### 1.2.1 Board Information

- **Pin Definition:** PICMG COM.0 R2.1 Type 6 pin-out definition
- **Form Factor:** PICMG COM.0 R2.1 Basic Module 125 x 95 mm

### 1.2.2 System Information

- **CPU:** 4th Generation Intel® Core Processor

| CPU       | Standard Freq. (GHz) | Max.Turbo Freq. (GHz) | Core | Cache (MB) | TDP (W) |
|-----------|----------------------|-----------------------|------|------------|---------|
| i7-4700EQ | 2.4                  | 3.4                   | 4    | 6          | 47      |
| i5-4400E  | 2.7                  | 3.3                   | 2    | 3          | 37      |
| i5-4402E  | 1.6                  | 2.7                   | 2    | 3          | 25      |
| i3-4100E  | 2.4                  | NA                    | 2    | 3          | 37      |
| i3-4102E  | 1.6                  | NA                    | 2    | 3          | 25      |

- **Chipset:** Intel® QM87 Express Chipset
- **Memory:** 2 SODIMM Socket for DDR3L-1600/1333, up to 16GB
- **BIOS:** AMI UEFI 128Mbit SPI BIOS
- **Power management:** Supports power saving modes including Normal / Standby / Suspend modes. ACPI 2.0 compliant

### 1.2.3 Display

- **Graphic Core:** Intel® HD Graphic 4600 supports DX11.1, OGL4.0, OCL1.2, and MPEG2, AVC/H.264, VC-1 HW decode/encode/transcode acceleration

| CPU       | Graphics Core    | Base Freq. | Max Freq. |
|-----------|------------------|------------|-----------|
| i7-4700EQ | HD Graphics 4600 | 400 MHz    | 1000 MHz  |
| i5-4400E  | HD Graphics 4600 | 400 MHz    | 900 MHz   |
| i5-4402E  | HD Graphics 4600 | 400 MHz    | 900 MHz   |
| i3-4100E  | HD Graphics 4600 | 400 MHz    | 900 MHz   |
| i3-4102E  | HD Graphics 4600 | 400 MHz    | 900 MHz   |

- **VGA:** Resolution up to 1920 x 2000
- **LVDS:** Supports single/dual channel 18/24-bit, resolution up to 1920 x 1200 @ 60 Hz
- **HDMI/DVI/DP:** Supports 3 ports HDMI (default), DVI, or DP multiplexed.
- **Resolution:**
  - HDMI up to 4096 x 2160 @24 Hz
  - DVI up to 1920 x 1080 @ 60 Hz
  - DP up to 4096 x 2160 @ 24 Hz
- **Dual Display:**
  - VGA + LVDS,
  - VGA + HDMI/DVI/DP
  - LVDS + HDMI/DVI/DP
  - HDMI/DVI/DP + HDMI/DVI/DP
- **Triple Display:**
  - LVDS + DP + DP/HDMI
  - LVDS + DP + VGA
  - LVDS + HDMI + HDMI
  - DP + DP + DP
  - DP + HDMI +HDMI
  - DVI + DP + HDMI
  - VGA + DP + HDMI

### 1.2.4 Expansion Interface

- **PCI Express x16:** Supports default 1 port PCIe x16 compliant to PCIe Gen3\* (8.0 GT/s) specification, several configurable combinations may need BOM modifies. Please contact to Advantech sales or FAE for more detail.

|          | x16 | x8 | x4 |
|----------|-----|----|----|
| Default  | 1   | 0  | 0  |
| Option 1 | 0   | 2  | 0  |
| Option 2 | 0   | 1  | 2  |

- **PCI Express x1:** Support default 7 ports PCIe x1 compliant to PCIe Gen2\* (5.0 GT/s) specification, several configurable combinations may need BIOS modifies. Please contact to Advantech sales or FAE for more detail.

|          | x4 | x2 | x1 |
|----------|----|----|----|
| Default  | 0  | 0  | 7  |
| Option 1 | 0  | 2  | 3  |
| Option 2 | 1  | 0  | 3  |

- **Audio Interface:** Intel HD Audio interface
- **LPC Bus**
- **SMBus**
- **I2C Bus:** 100 KHz (up to 400 KHz with BIOS modification. Please contact Advantech sales or FAE for more details)
- **SPI:** Supports SPI BIOS only

### 1.2.5 I/O

- **Ethernet:** Intel I217LM Gigabit LAN supports 10/100/1000 Mbps Speed
- **SATA:** Supports 4 ports SATA Gen3 (6 Gb/s)
- **USB Interface:** Supports 4 ports USB3.0, 8 ports USB 2.0
- **Serial Port:** Supports 2 ports 2-wire serial port
- **Express Card:** 2 ports
- **Panel Control:** Supports panel backlight on/off control, brightness control
- **Thermal Protection:** Supports thermal shutdown or CPU throttling
- **Watchdog Timer:** 65536 level timer interval, from 0~65535 sec, multi-level, multi-option watchdog timer
- **Smart Fan:** 1 port on Module, 1 port down to carrier board
- **GPIO:** 8-bit GPIO
- **Hardware Monitor:** Vin, 5 VSB, CMOS
- **TPM:** BOM option, default not available


### 1.2.6 iManager 2.0

Refer to section 4.3

### 1.2.7 Mechanical and Environmental Specification

- **Dimensions:** 125 x 95 mm (4.92" x 3.74")
- **Power Type and Supply Voltage:**
  - ATX: +8.5 ~ 20 V and +4.75 ~ 5.25 VSB (standby power)
  - AT: +8.5 ~ 20 V
  - CMOS Battery: +3.3 V
- **Power Requirement:**
  - Test condition: SOM-5894FG-U4A1E (i7-4700EQ), DDR3L-1333 4GB, WIN7 32-bit, under 12 V and 5 VSB input power supply.
  - Idle: 8.5 W
  - Max: 41.8 W (Burn-in V6.0 Pro)
- **Temperature Specification:**
  - Operating: 0 ~ 60° C (32 ~ 140° F)
  - Storage: -40 ~ 85° C (-40 ~ 185° F)
- **Humidity Specification:**
  - Operating: 40° C @ 95% relative humidity, non-condensing
  - Storage: 60° C @ 95% relative humidity, non-condensing

## 1.3 Functional Block Diagram

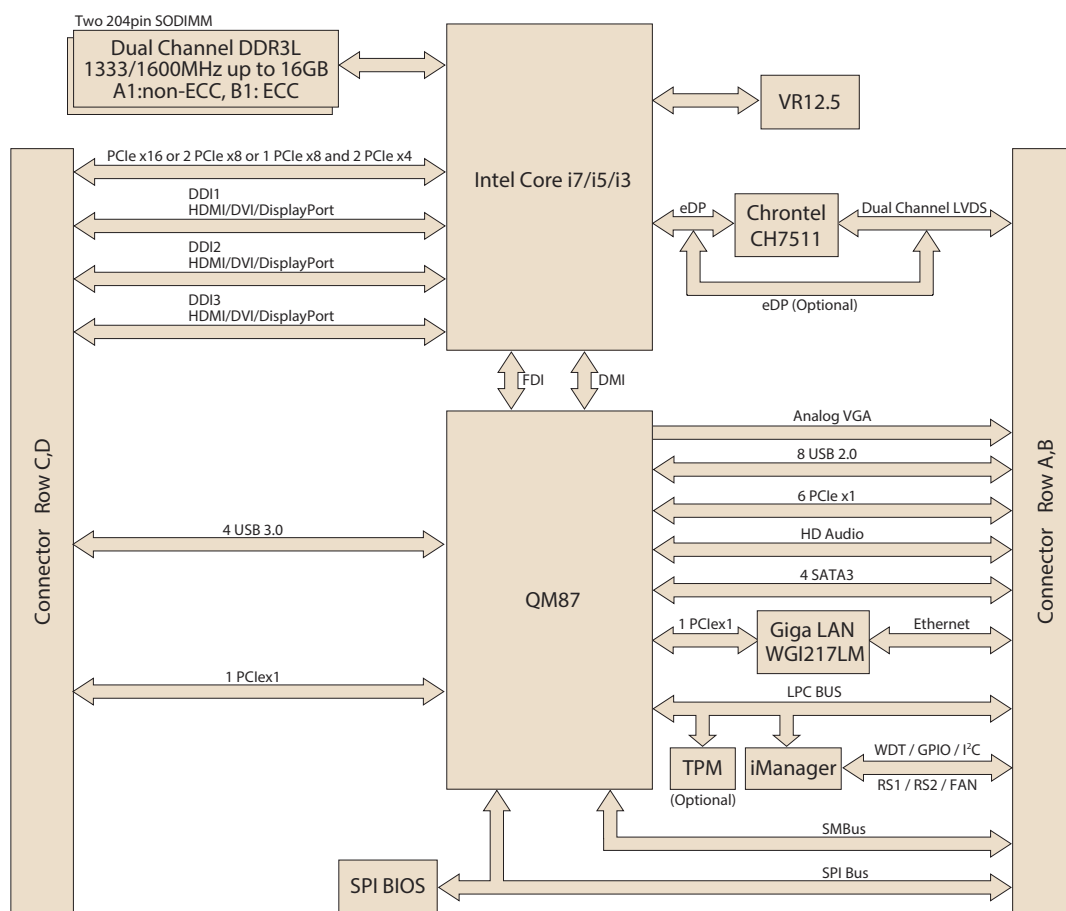



# Chapter 2

## Mechanical Information

This chapter gives mechanical information on the SOM-5894 CPU Computer on Module.

Sections include:

- Board Information
- Mechanical Drawing
- Assembly Drawing
- Main Chip Height

## 2.1 Board Information

The figures below indicate the main chips on SOM-5894 Computer-on-Module. Please aware of these positions while designing your own carrier board to avoid mechanical problems and thermal solutions for best heat dissipation performance.

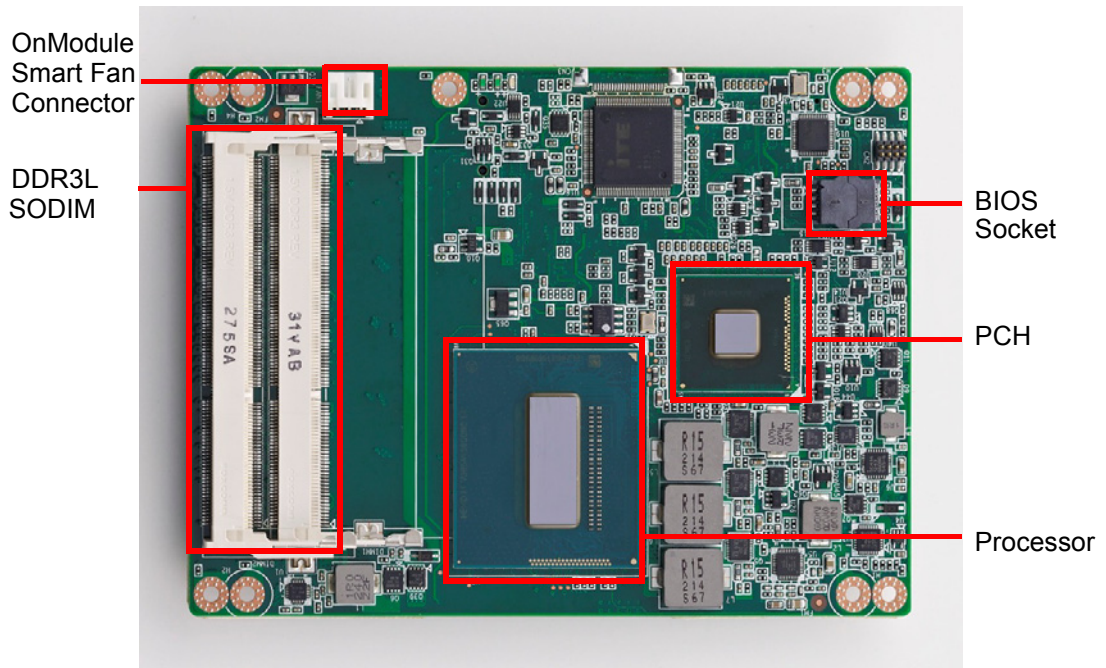


Figure 2.1 Board Chips Identify - Front


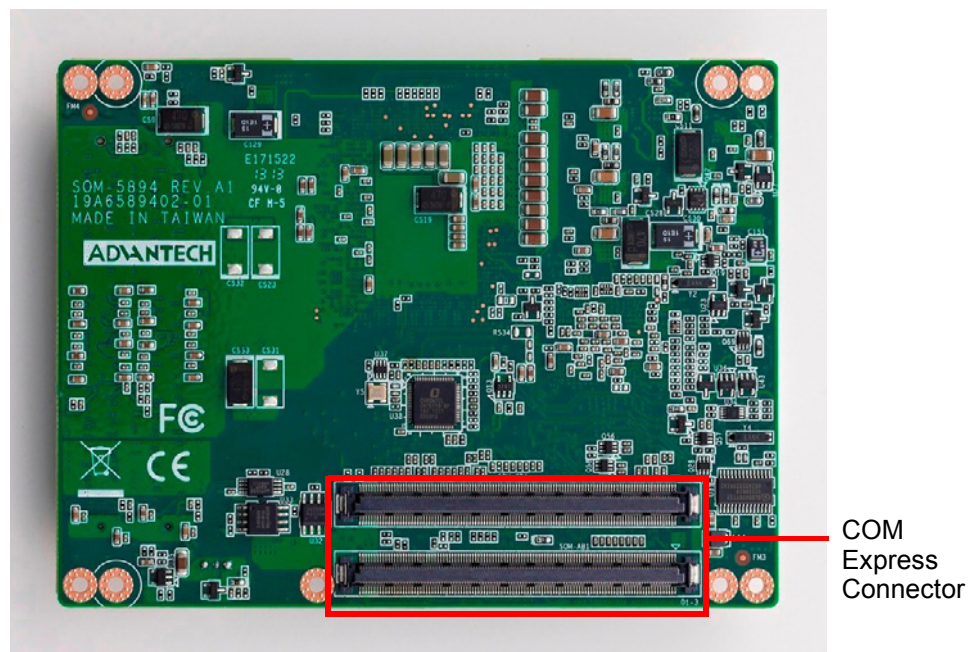



Figure 2.2 Board Chips Identify - Back

## 2.2 Mechanical Drawing

For more detail about 2D/3D models, please find on Advantech COM support service website <http://com.advantech.com>.

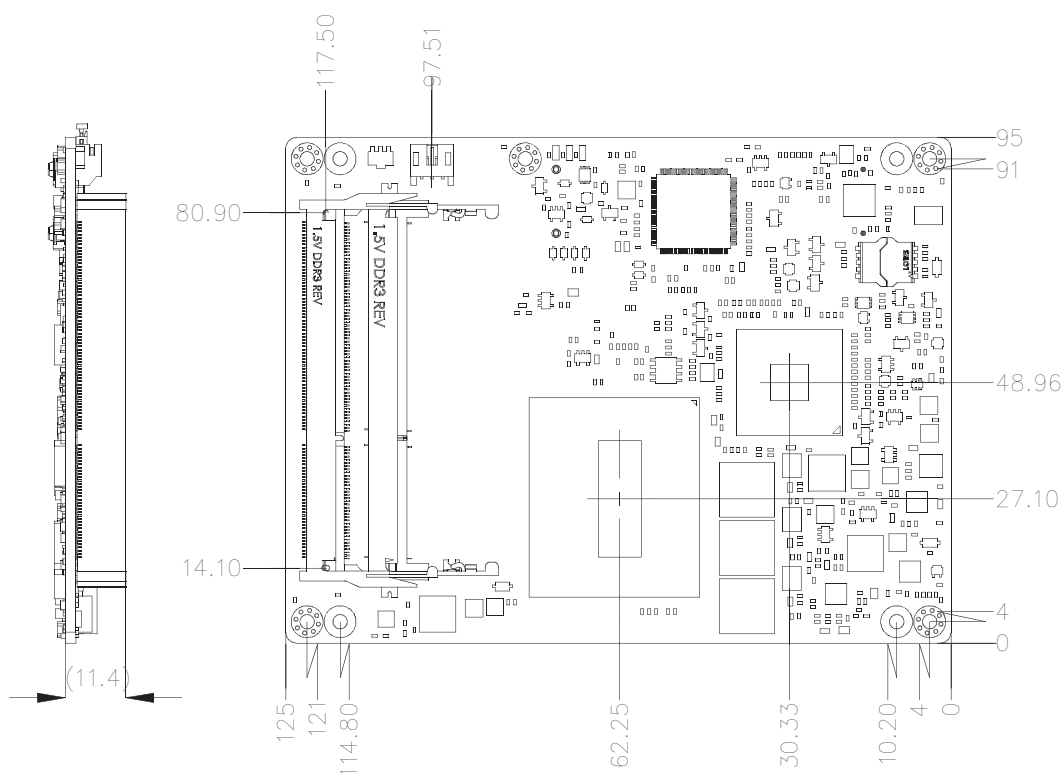


**Figure 2.3 Board Mechanical Drawing - Front**

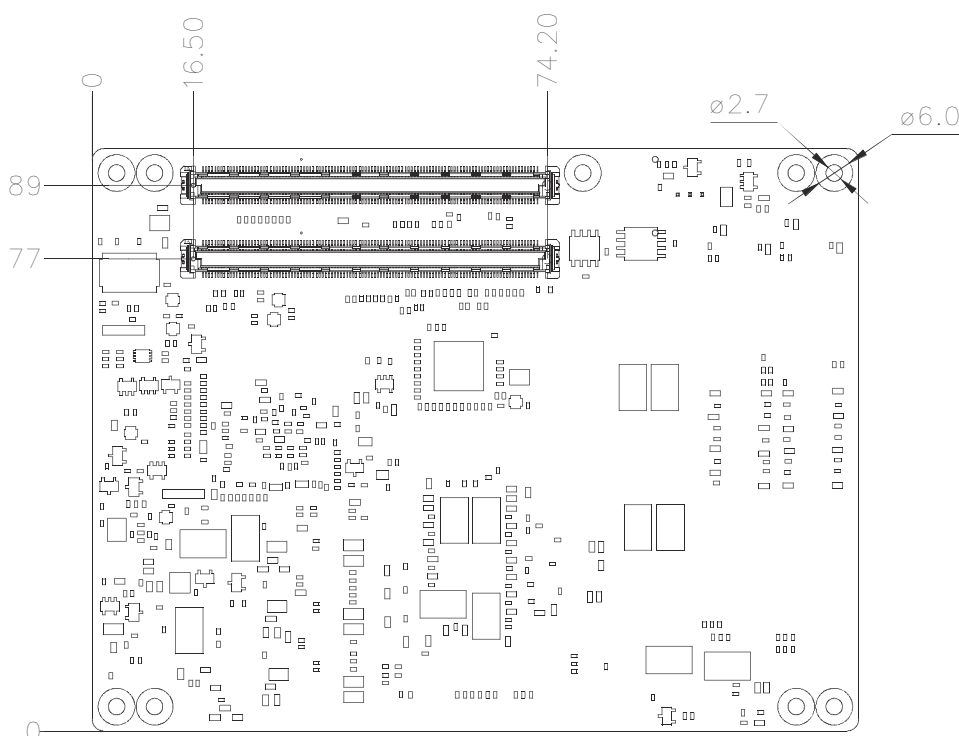

**Figure 2.4 Board Mechanical Drawing - Back**


## 2.3 Assembly Drawing

These figures demonstrate the assembly order from the thermal module, and the COM module to the carrier board.

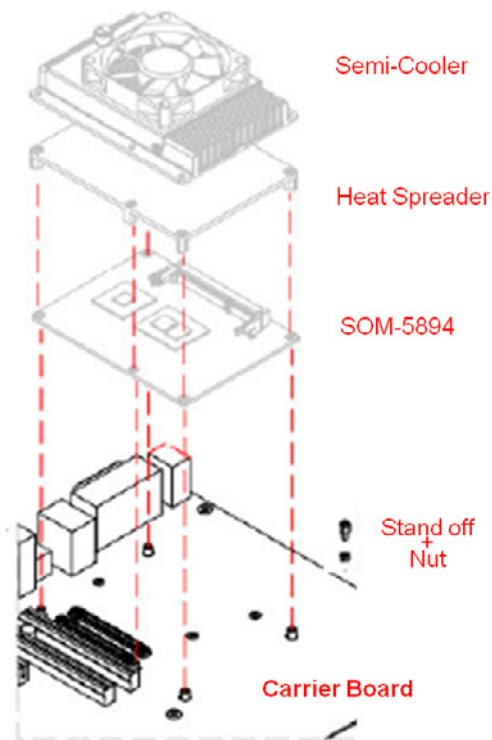

**Figure 2.5 Assembly Drawing**


There are 4 reserved screw holes for SOM-5894 to be pre-assembled with the heat spreader.

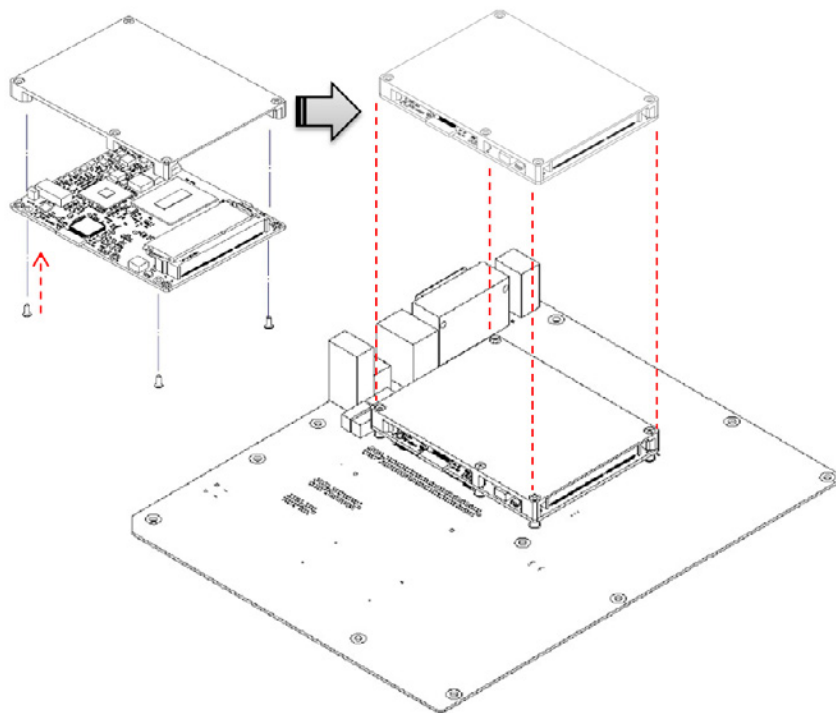

**Figure 2.6 Heatspreader Pre-Assembly**

## 2.4 Main Chip Height

Please consider the CPU and chip height tolerance when designing your thermal solution.

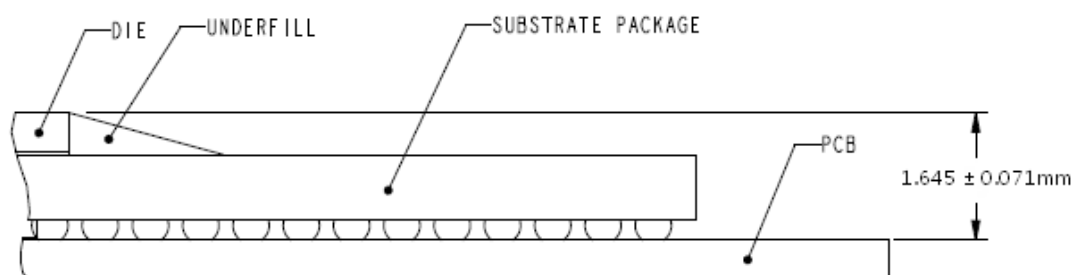

**Figure 2.7 Main Chip Height and Tolerance**



# Chapter 3


## AMI BIOS

Sections include:

- Introduction
- Entering Setup
- Hot / Operation Key
- Exit BIOS Setup Utility

## 3.1 Introduction

With the AMI BIOS Setup program, users can modify BIOS settings and control various system features. This chapter describes the basic navigation of the BIOS Setup Utility.

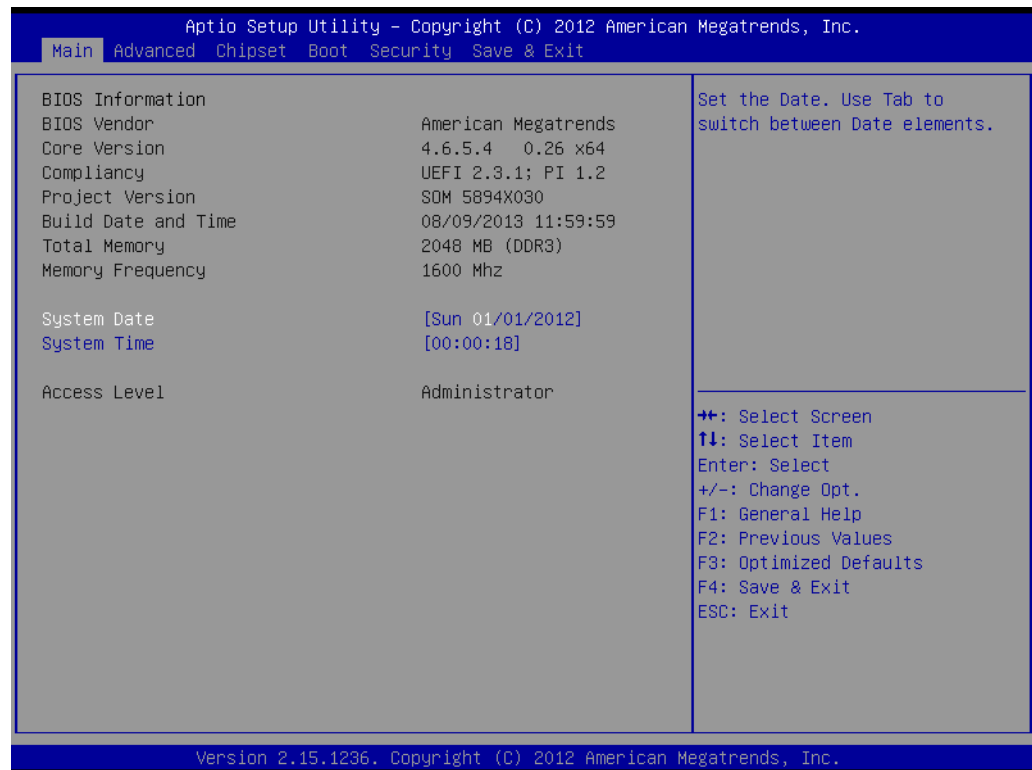

**Figure 3.1 BIOS Setup Utility Main Screen**

AMI's BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This information is stored in battery-backed CMOS so it retains the Setup information when the power is turned off.

## 3.2 Entering Setup

Turn on the computer and then press <F2> or <DEL> to enter Setup menu.

## 3.3 Hot / Operation key

When users first enter the BIOS Setup Utility, users will enter the Main setup screen. Users can always hot operation key to configure item setting.

### 3.3.1 Left / Right Key

Use these keys to switch sub-page or tab.

### 3.3.2 ESC key

Use this key to return previous page or exit this page.

### 3.3.3 Enter Key

Use this key to enter sub-page or change this item options.

### 3.3.4 + / - key

Use this key to switch item option.

### 3.3.5 F1 key

Use this key to display the help txt of this item.

### 3.3.6 F2 key

Use this key to load previous all of item setting.

### 3.3.7 F3 key

Use this key to load default setting all of items.

### 3.3.8 F4 key

Use this key to save and exit BIOS Setup Utility.

## 3.4 Exit BIOS Setup Utility

Switch to the Exit tab of the BIOS Setup Utility and select "Save changes and Exit". The system will then restart. There are several exit methods users can select. Or you use the F4 key to exit the BIOS Setup Utility.



# Chapter 4

## S/W Introduction & Installation

Sections include:

- S/W Introduction
- Driver Installation
- Advantech iManager

---

## 4.1 S/W Introduction

The mission of Advantech Embedded Software Services is to "Enhance quality of life with Advantech platforms and Microsoft Windows embedded technology." We enable Windows Embedded software products on Advantech platforms to more effectively support the embedded computing community. Customers are freed from the hassle of dealing with multiple vendors (Hardware suppliers, System integrators, Embedded OS distributor) for projects. Our goal is to make Windows Embedded Software solutions easily and widely available to the embedded computing community.

## 4.2 Driver Installation

The Intel Chipset Software Installation (CSI) utility installs the Windows INF files that outline to the operating system how the chipset components will be configured.

### 4.2.1 Windows Driver Setup

To install the drivers on a windows-based operation system, please connect to internet and browse the website <http://support.advantech.com.tw> and download the drivers that you want to install and follow Driver Setup instructions to complete the installation.

### 4.2.2 Other OS

To install the drivers for Linux or other OS, please connect to internet and browse the website <http://support.advantech.com.tw> to download the setup file.

## 4.3 Advantech iManager

Advantech's platforms come equipped with iManager, a micro controller that provides embedded features for system integrators. Embedded features have been moved from the OS/BIOS level to the board level, to increase reliability and simplify integration. iManager runs whether the operating system is running or not; it can count the boot times and running hours of the device, monitor device health, and provide an advanced watchdog to handle errors just as they happen. iManager also comes with a secure & encrypted EEPROM for storing important security key or other customer define information. All the embedded functions are configured through API and provide corresponding utilities to demonstrate. These APIs comply with PICMG EAPI (Embedded Application Programmable Interface) specification and unify in the same structures. It makes these embedded features easier to integrate, speed up developing schedule, and provide the customer's software continuity while upgrade hardware. For more details of how to use the APIs and utilities, please refer to Advantech iManager 2.0 Software API User Manual.

### Control



**GPIO**

General Purpose Input/Output is a flexible parallel interface that allows a variety of custom connections. It allows users to monitor the level of signal input or set the output status to switch on/off a device. Our API also provides Programmable GPIO, which allows developers to dynamically set the GPIO input or output status.



**SMBus**

SMBus is the System Management Bus defined by Intel® Corporation in 1995. It is used in personal computers and servers for low-speed system management communications. The SMBus API allows a developer to interface a embedded system environment and transfer serial messages using the SMBus protocols, allowing multiple simultaneous device control.



**I2C**

I2C is a bi-directional two wire bus that was developed by Philips for use in their televisions in the 1980s. The I2C API allows a developer to interface with an embedded system environment and transfer serial messages using the I2C protocols, allowing multiple simultaneous device control.

### Display



**Brightness Control**

The Brightness Control API allows a developer to interface with an embedded device to easily control brightness.



**Backlight**

The Backlight API allows a developer to control the backlight (screen) on/off in an embedded device.

### Monitor



**Watchdog**

A watchdog timer (WDT) is a device that performs a specific operation after a certain period of time if something goes wrong and the system does not recover on its own. A watchdog timer can be programmed to perform a warm boot (restarting the system) after a certain number of seconds.



**Hardware Monitor**

The Hardware Monitor (HWM) API is a system health supervision API that inspects certain condition indexes, such as fan speed, temperature and voltage.



**Hardware Control**

The Hardware Control API allows developers to set the PWM (Pulse Width Modulation) value to adjust fan speed or other devices; it can also be used to adjust the LCD brightness.

### Power Saving



**CPU Speed**

Make use of Intel SpeedStep technology to reduce power power consumption. The system will automatically adjust the CPU Speed depending on system loading.



**System Throttling**

Refers to a series of methods for reducing power consumption in computers by lowering the clock frequency. These APIs allow the user to lower the clock from 87.5% to 12.5%.



# Appendix **A**

## Pin Assignment

This appendix gives you the information about the hardware pin assignment of the SOM-5894 CPU System on Module.

Sections include:

- SOM-5894 Type 6 Pin Assignment

## A.1 SOM-5894 Type 6 Pin Assignment

This section gives SOM-5894 pin assignment on COM Express connector which compliant with COMR.0 R2.1 Type 6 pin-out definitions. More details about how to use these pins and get design reference, please contact to Advantech for design guide, checklist, reference schematic, and other hardware/software supports.

| SOM-5894 Row A, B |                |     |             |
|-------------------|----------------|-----|-------------|
| A1                | GND            | B1  | GND         |
| A2                | GBE0_MDI3-     | B2  | GBE0_ACT#   |
| A3                | GBE0_MDI3+     | B3  | LPC_FRAME#  |
| A4                | GBE0_LINK100#  | B4  | LPC_AD0     |
| A5                | GBE0_LINK1000# | B5  | LPC_AD1     |
| A6                | GBE0_MDI2-     | B6  | LPC_AD2     |
| A7                | GBE0_MDI2+     | B7  | LPC_AD3     |
| A8                | GBE0_LINK#     | B8  | LPC_DRQ0#   |
| A9                | GBE0_MDI1-     | B9  | LPC_DRQ1#   |
| A10               | GBE0_MDI1+     | B10 | LPC_CLK     |
| A11               | GND            | B11 | GND         |
| A12               | GBE0_MDI0-     | B12 | PWRBTN#     |
| A13               | GBE0_MDI0+     | B13 | SMB_CK      |
| A14               | N/A            | B14 | SMB_DAT     |
| A15               | SUS_S3#        | B15 | SMB_ALERT#  |
| A16               | SATA0_TX+      | B16 | SATA1_TX+   |
| A17               | SATA0_TX-      | B17 | SATA1_TX-   |
| A18               | SUS_S4#        | B18 | SUS_STAT#   |
| A19               | SATA0_RX+      | B19 | SATA1_RX+   |
| A20               | SATA0_RX-      | B20 | SATA1_RX-   |
| A21               | GND            | B21 | GND         |
| A22               | SATA2_TX+      | B22 | SATA3_TX+   |
| A23               | SATA2_TX-      | B23 | SATA3_TX-   |
| A24               | SUS_S5#        | B24 | PWR_OK      |
| A25               | SATA2_RX+      | B25 | SATA3_RX+   |
| A26               | SATA2_RX-      | B26 | SATA3_RX-   |
| A27               | BATLOW#        | B27 | WDT         |
| A28               | SATA_ACT#      | B28 | HDA_SDIN2   |
| A29               | HDA_SYNC       | B29 | HDA_SDIN1   |
| A30               | HDA_RST#       | B30 | HDA_SDIN0   |
| A31               | GND            | B31 | GND         |
| A32               | HDA_BITCLK     | B32 | SPKR        |
| A33               | HDA_SDOUT      | B33 | I2C_CK      |
| A34               | BIOS_DIS0#     | B34 | I2C_DAT     |
| A35               | THRMTRIP#      | B35 | THRM#       |
| A36               | USB6-          | B36 | USB7-       |
| A37               | USB6+          | B37 | USB7+       |
| A38               | USB_6_7_OC#    | B38 | USB_4_5_OC# |
| A39               | USB4-          | B39 | USB5-       |
| A40               | USB4+          | B40 | USB5+       |

|     |               |     |                |
|-----|---------------|-----|----------------|
| A41 | GND           | B41 | GND            |
| A42 | USB2-         | B42 | USB3-          |
| A43 | USB2+         | B43 | USB3+          |
| A44 | USB_2_3_OC#   | B44 | USB_0_1_OC#    |
| A45 | USB0-         | B45 | USB1-          |
| A46 | USB0+         | B46 | USB1+          |
| A47 | VCC_RTC       | B47 | EXCD1_PERST#   |
| A48 | EXCD0_PERST#  | B48 | EXCD1_CPPE#    |
| A49 | EXCD0_CPPE#   | B49 | SYS_RESET#     |
| A50 | LPC_SERIRQ    | B50 | CB_RESET#      |
| A51 | GND           | B51 | GND            |
| A52 | PCIE_TX5+     | B52 | PCIE_RX5+      |
| A53 | PCIE_TX5-     | B53 | PCIE_RX5-      |
| A54 | GPI0          | B54 | GPO1           |
| A55 | PCIE_TX4+     | B55 | PCIE_RX4+      |
| A56 | PCIE_TX4-     | B56 | PCIE_RX4-      |
| A57 | GND           | B57 | GPO2           |
| A58 | PCIE_TX3+     | B58 | PCIE_RX3+      |
| A59 | PCIE_TX3-     | B59 | PCIE_RX3-      |
| A60 | GND           | B60 | GND            |
| A61 | PCIE_TX2+     | B61 | PCIE_RX2+      |
| A62 | PCIE_TX2-     | B62 | PCIE_RX2-      |
| A63 | GPI1          | B63 | GPO3           |
| A64 | PCIE_TX1+     | B64 | PCIE_RX1+      |
| A65 | PCIE_TX1-     | B65 | PCIE_RX1-      |
| A66 | GND           | B66 | WAKE0#         |
| A67 | GPI2          | B67 | WAKE1#         |
| A68 | PCIE_TX0+     | B68 | PCIE_RX0+      |
| A69 | PCIE_TX0-     | B69 | PCIE_RX0-      |
| A70 | GND           | B70 | GND            |
| A71 | LVDS_A0+      | B71 | LVDS_B0+       |
| A72 | LVDS_A0-      | B72 | LVDS_B0-       |
| A73 | LVDS_A1+      | B73 | LVDS_B1+       |
| A74 | LVDS_A1-      | B74 | LVDS_B1-       |
| A75 | LVDS_A2+      | B75 | LVDS_B2+       |
| A76 | LVDS_A2-      | B76 | LVDS_B2-       |
| A77 | LVDS_VDD_EN   | B77 | LVDS_B3+       |
| A78 | LVDS_A3+      | B78 | LVDS_B3-       |
| A79 | LVDS_A3-      | B79 | LVDS_BKLT_EN   |
| A80 | GND           | B80 | GND            |
| A81 | LVDS_A_CK+    | B81 | LVDS_B_CK+     |
| A82 | LVDS_A_CK-    | B82 | LVDS_B_CK-     |
| A83 | LVDS_I2C_CK   | B83 | LVDS_BKLT_CTRL |
| A84 | LVDS_I2C_DAT  | B84 | VCC_5V_SBY     |
| A85 | GPI3          | B85 | VCC_5V_SBY     |
| A86 | RSVD          | B86 | VCC_5V_SBY     |
| A87 | eDP_HPD       | B87 | VCC_5V_SBY     |
| A88 | PCIE0_CK_REF+ | B88 | BIOS_DIS1#     |

|      |               |      |             |
|------|---------------|------|-------------|
| A89  | PCIE0_CK_REF- | B89  | VGA_RED     |
| A90  | GND           | B90  | GND         |
| A91  | SPI_POWER     | B91  | VGA_GRN     |
| A92  | SPI_MISO      | B92  | VGA_BLU     |
| A93  | GPO0          | B93  | VGA_HSYNC   |
| A94  | SPI_CLK       | B94  | VGA_VSYNC   |
| A95  | SPI_MOSI      | B95  | VGA_I2C_CK  |
| A96  | PP_TPM        | B96  | VGA_I2C_DAT |
| A97  | TYPE10#       | B97  | SPI_CS#     |
| A98  | RS1_TX        | B98  | RSVD        |
| A99  | RS1_RX        | B99  | RSVD        |
| A100 | GND           | B100 | GND         |
| A101 | RS2_TX        | B101 | FAN_PWMOUT  |
| A102 | RS2_RX        | B102 | FAN_TACHIN  |
| A103 | LID#          | B103 | SLEEP#      |
| A104 | VCC_12V       | B104 | VCC_12V     |
| A105 | VCC_12V       | B105 | VCC_12V     |
| A106 | VCC_12V       | B106 | VCC_12V     |
| A107 | VCC_12V       | B107 | VCC_12V     |
| A108 | VCC_12V       | B108 | VCC_12V     |
| A109 | VCC_12V       | B109 | VCC_12V     |
| A110 | GND           | B110 | GND         |

#### **SOM-5894 Row C, D**

|     |             |     |            |
|-----|-------------|-----|------------|
| C1  | GND         | D1  | GND        |
| C2  | GND         | D2  | GND        |
| C3  | USB_SSRX0-  | D3  | USB_SSTX0- |
| C4  | USB_SSRX0+  | D4  | USB_SSTX0+ |
| C5  | GND         | D5  | GND        |
| C6  | USB_SSRX1-  | D6  | USB_SSTX1- |
| C7  | USB_SSRX1+  | D7  | USB_SSTX1+ |
| C8  | GND         | D8  | GND        |
| C9  | USB_SSRX2-  | D9  | USB_SSTX2- |
| C10 | USB_SSRX2+  | D10 | USB_SSTX2+ |
| C11 | GND         | D11 | GND        |
| C12 | USB_SSRX3-  | D12 | USB_SSTX3- |
| C13 | USB_SSRX3+  | D13 | USB_SSTX3+ |
| C14 | GND         | D14 | GND        |
| C15 | DDI1_PAIR6+ | D15 | DDI1_AUX+  |
| C16 | DDI1_PAIR6- | D16 | DDI1_AUX-  |
| C17 | RSVD        | D17 | RSVD       |
| C18 | RSVD        | D18 | RSVD       |
| C19 | PCIE_RX6+   | D19 | PCIE_TX6+  |
| C20 | PCIE_RX6-   | D20 | PCIE_TX6-  |
| C21 | GND         | D21 | GND        |
| C22 | N/A         | D22 | N/A        |
| C23 | N/A         | D23 | N/A        |
| C24 | DDI1_HPD    | D24 | RSVD       |

|     |                   |     |                  |
|-----|-------------------|-----|------------------|
| C25 | N/A               | D25 | RSVD             |
| C26 | N/A               | D26 | DDI1_PAIR0+      |
| C27 | RSVD              | D27 | DDI1_PAIR0-      |
| C28 | RSVD              | D28 | RSVD             |
| C29 | DDI1_PAIR5+       | D29 | DDI1_PAIR1+      |
| C30 | DDI1_PAIR5-       | D30 | DDI1_PAIR1-      |
| C31 | GND               | D31 | GND              |
| C32 | DDI2_CTRLCLK_AUX+ | D32 | DDI1_PAIR2+      |
| C33 | DDI2_CTRLCLK_AUX- | D33 | DDI1_PAIR2-      |
| C34 | DDI2_DDC_AUX_SEL  | D34 | DDI1_DDC_AUX_SEL |
| C35 | RSVD              | D35 | RSVD             |
| C36 | DDI3_CTRLCLK_AUX+ | D36 | DDI1_PAIR3+      |
| C37 | DDI3_CTRLCLK_AUX- | D37 | DDI1_PAIR3-      |
| C38 | DDI3_DDC_AUX_SEL  | D38 | RSVD             |
| C39 | DDI3_PAIR0+       | D39 | DDI2_PAIR0+      |
| C40 | DDI3_PAIR0-       | D40 | DDI2_PAIR0-      |
| C41 | GND               | D41 | GND              |
| C42 | DDI3_PAIR1+       | D42 | DDI2_PAIR1+      |
| C43 | DDI3_PAIR1-       | D43 | DDI2_PAIR1-      |
| C44 | DDI3_HPD          | D44 | DDI2_HPD         |
| C45 | RSVD              | D45 | RSVD             |
| C46 | DDI3_PAIR2+       | D46 | DDI2_PAIR2+      |
| C47 | DDI3_PAIR2-       | D47 | DDI2_PAIR2-      |
| C48 | RSVD              | D48 | RSVD             |
| C49 | DDI3_PAIR3+       | D49 | DDI2_PAIR3+      |
| C50 | DDI3_PAIR3-       | D50 | DDI2_PAIR3-      |
| C51 | GND               | D51 | GND              |
| C52 | PEG_RX0+          | D52 | PEG_TX0+         |
| C53 | PEG_RX0-          | D53 | PEG_TX0-         |
| C54 | TYPE0#            | D54 | PEG_LANE_RV#     |
| C55 | PEG_RX1+          | D55 | PEG_TX1+         |
| C56 | PEG_RX1-          | D56 | PEG_TX1-         |
| C57 | TYPE1#            | D57 | TYPE2#           |
| C58 | PEG_RX2+          | D58 | PEG_TX2+         |
| C59 | PEG_RX2-          | D59 | PEG_TX2-         |
| C60 | GND               | D60 | GND              |
| C61 | PEG_RX3+          | D61 | PEG_TX3+         |
| C62 | PEG_RX3-          | D62 | PEG_TX3-         |
| C63 | RSVD              | D63 | RSVD             |
| C64 | RSVD              | D64 | RSVD             |
| C65 | PEG_RX4+          | D65 | PEG_TX4+         |
| C66 | PEG_RX4-          | D66 | PEG_TX4-         |
| C67 | RSVD              | D67 | GND              |
| C68 | PEG_RX5+          | D68 | PEG_TX5+         |
| C69 | PEG_RX5-          | D69 | PEG_TX5-         |
| C70 | GND               | D70 | GND              |
| C71 | PEG_RX6+          | D71 | PEG_TX6+         |
| C72 | PEG_RX6-          | D72 | PEG_TX6-         |

|      |           |      |             |
|------|-----------|------|-------------|
| C73  | GND       | D73  | GND         |
| C74  | PEG_RX7+  | D74  | PEG_TX7+    |
| C75  | PEG_RX7-  | D75  | PEG_TX7-    |
| C76  | GND       | D76  | GND         |
| C77  | RSVD      | D77  | RSVD        |
| C78  | PEG_RX8+  | D78  | PEG_TX8+    |
| C79  | PEG_RX8-  | D79  | PEG_TX8-    |
| C80  | GND       | D80  | GND         |
| C81  | PEG_RX9+  | D81  | PEG_TX9+    |
| C82  | PEG_RX9-  | D82  | PEG_TX9-    |
| C83  | RSVD      | D83  | RSVD        |
| C84  | GND       | D84  | GND         |
| C85  | PEG_RX10+ | D85  | PEG_TX10+   |
| C86  | PEG_RX10- | D86  | PEG_TX10-   |
| C87  | GND       | D87  | GND         |
| C88  | PEG_RX11+ | D88  | PEG_TX11+   |
| C89  | PEG_RX11- | D89  | PEG_TX11-   |
| C90  | GND       | D90  | GND         |
| C91  | PEG_RX12+ | D91  | PEG_TX12+   |
| C92  | PEG_RX12- | D92  | PEG_TX12-   |
| C93  | GND       | D93  | GND         |
| C94  | PEG_RX13+ | D94  | PEG_TX13+   |
| C95  | PEG_RX13- | D95  | PEG_TX13-   |
| C96  | GND       | D96  | GND         |
| C97  | RSVD      | D97  | PEG_ENABLE# |
| C98  | PEG_RX14+ | D98  | PEG_TX14+   |
| C99  | PEG_RX14- | D99  | PEG_TX14-   |
| C100 | GND       | D100 | GND         |
| C101 | PEG_RX15+ | D101 | PEG_TX15+   |
| C102 | PEG_RX15- | D102 | PEG_TX15-   |
| C103 | GND       | D103 | GND         |
| C104 | VCC_12V   | D104 | VCC_12V     |
| C105 | VCC_12V   | D105 | VCC_12V     |
| C106 | VCC_12V   | D106 | VCC_12V     |
| C107 | VCC_12V   | D107 | VCC_12V     |
| C108 | VCC_12V   | D108 | VCC_12V     |
| C109 | VCC_12V   | D109 | VCC_12V     |
| C110 | GND       | D110 | GND         |

# Appendix **B**

## Watchdog Timer

This appendix gives you the information about the watchdog timer programming on the SOM-5894 CPU System on Module.

Sections include:

- Watchdog Timer Programming

## B.1 Programming the Watchdog Timer

| Trigger Event    | Note                                            |
|------------------|-------------------------------------------------|
| IRQ              | IRQ5, 7, 14<br>(BIOS setting default disable)** |
| NMI              | N/A                                             |
| SCI              | Power button event                              |
| Power Off        | Support                                         |
| H/W Restart      | Support                                         |
| WDT Pin Activate | Support                                         |

\*\* WDT new driver support automatically select available IRQ number from BIOS, and then set to EC. Only Win XP, Win7 and Win8 support it.

In other OS, it will still use IRQ number from BIOS setting as usual.

For details, please refer to *iManager & Software API User Manual*:

# Appendix **C**

## Programming GPIO

This Appendix gives the illustration of the General Purpose Input and Output pin setting.

Sections include:

- System I/O Ports

---

## C.1 GPIO Register

| GPIO Byte Mapping | H/W Pin Name |
|-------------------|--------------|
| BIT0              | GPO0         |
| BIT1              | GPO1         |
| BIT2              | GPO2         |
| BIT3              | GPO3         |
| BIT4              | GPI0         |
| BIT5              | GPI1         |
| BIT6              | GPI2         |
| BIT7              | GPI3         |

For details, please refer to *iManager & Software API User Manual*.

# Appendix **D**

## System Assignments

This appendix gives you the information about the system resource allocation on the SOM-5894 CPU System on Module.

Sections include:

- System I/O ports
- DMA Channel Assignments
- Interrupt Assignments
- 1st MB Memory Map

## D.1 System I/O Ports

**Table D.1: System I/O Ports**

| <b>Addr.range(Hex)</b> | <b>Device</b>                                           |
|------------------------|---------------------------------------------------------|
| 0000 - 001F            | Direct memory access controller                         |
| 0020 - 0021            | Programmable interrupt controller                       |
| 0022 - 003F            | Motherboard resources                                   |
| 0040 - 0043            | System timer                                            |
| 0044 - 005F            | Motherboard resources                                   |
| 0060 - 0060            | Standard 101/102-Key or Microsoft Natural PS/2 Keyboard |
| 0061 - 0061            | Motherboard resources                                   |
| 0062 - 0062            | Microsoft ACPI-Compliant Embedded Controller            |
| 0063 - 0063            | Motherboard resources                                   |
| 0064 - 0064            | Standard 101/102-Key or Microsoft Natural PS/2 Keyboard |
| 0065 - 0065            | Motherboard resources                                   |
| 0066 - 0066            | Microsoft ACPI-Compliant Embedded Controller            |
| 0067 - 0067            | Motherboard resources                                   |
| 0070 - 0077            | System CMOS/real time clock                             |
| 0072 - 007F            | Motherboard resources                                   |
| 0080 - 0080            | Motherboard resources                                   |
| 0081 - 0091            | Direct memory access controller                         |
| 0090 - 009F            | Motherboard resources                                   |
| 00A0 - 00A1            | Programmable interrupt controller                       |
| 00A2 - 00BF            | Motherboard resources                                   |
| 00C0 - 00DF            | Direct memory access controller                         |
| 00E0 - 00EF            | Motherboard resources                                   |
| 00F0 - 00FF            | Numeric data processor                                  |
| 01F0 - 01F7            | Primary IDE Channel                                     |
| 01CE-01CF              | VGASAVE                                                 |
| 0200-020F              | Motherboard resources                                   |
| 0274 - 0277            | ISAPNP Read Data Port                                   |
| 0279 - 0279            | ISAPNP Read Data Port                                   |
| 029C-029D              | Motherboard resources                                   |
| 02E8-02EF              | VGASAVE                                                 |
| 02F8-02FF              | Communications Port (COM2)                              |
| 0378-037F              | ECP Printer Port (LPT1)                                 |
| 03B0-03BB              | VGASAVE                                                 |
| 03C0-03DF              | VGASAVE                                                 |
| 03F8-03FF              | Communications Port (COM1)                              |
| 0400-0453              | Motherboard resources                                   |
| 0454-0457              | Motherboard resources                                   |
| 0458-047F              | Motherboard resources                                   |
| 04D0-04D1              | Programmable interrupt controller                       |
| 0500-057F              | Motherboard resources                                   |
| 0680-069F              | Motherboard resources                                   |
| 0778-077F              | ECP Printer Port (LPT1)                                 |
| 0A79-0A79              | ISAPNP Read Data Port                                   |
| 164E-164F              | Motherboard resources                                   |
| F000-F03F              | Video Controller                                        |
| F040-F05F              | SM Bus Controller                                       |

|           |                                          |
|-----------|------------------------------------------|
| F060-F07F | Ethernet Controller                      |
| F080-F08F | Standard Dual Channel PCI IDE Controller |
| F090-F09F | Standard Dual Channel PCI IDE Controller |
| F0A0-F0A3 | Standard Dual Channel PCI IDE Controller |
| F0B0-F0B7 | Standard Dual Channel PCI IDE Controller |
| F0C0-F0C3 | Standard Dual Channel PCI IDE Controller |
| F0D0-F0D7 | Standard Dual Channel PCI IDE Controller |
| F0E0-F0EF | Standard Dual Channel PCI IDE Controller |
| F0F0-F0FF | Standard Dual Channel PCI IDE Controller |
| F100-F103 | Standard Dual Channel PCI IDE Controller |
| F110-F117 | Standard Dual Channel PCI IDE Controller |
| F120-F123 | Standard Dual Channel PCI IDE Controller |
| F130-F137 | Standard Dual Channel PCI IDE Controller |
| FFFF-FFFF | Motherboard resources                    |

## D.2 DMA Channel Assignments

**Table D.2: DMA Channel Assignments**

| Channel | Function                        |
|---------|---------------------------------|
| 3       | ECP Printer Port (LPT1)         |
| 4       | Direct memory access controller |

## D.3 Interrupt Assignments

**Table D.3: Interrupt Assignments**

| Interrupt# | Interrupt Source                                        |
|------------|---------------------------------------------------------|
| NMI        | Parity error detected                                   |
| IRQ 0      | System timer                                            |
| IRQ 1      | Standard 101/102-Key or Microsoft Natural PS/2 Keyboard |
| IRQ 3      | Communications Port (COM2)                              |
| IRQ 4      | Communications Port (COM1)                              |
| IRQ 8      | System CMOS/real time clock                             |
| IRQ 9      | Microsoft ACPI-Compliant System                         |
| IRQ 12     | PS/2 Compatible Mouse                                   |
| IRQ 13     | Numeric data processor                                  |

## D.4 1st MB Memory Map

**Table D.4: 1st MB Memory Map**

| Addr. range (Hex)   | Device                          |
|---------------------|---------------------------------|
| 000A0000-000BFFFF   | PCI Bus                         |
| 000D0000-000D3FFF   | PCI Bus                         |
| 000D4000-000D7FFF   | PCI Bus                         |
| 000D8000-000DBFFF   | PCI Bus                         |
| 000DC000-000DFFFF   | PCI Bus                         |
| 000E0000-000E3FFF   | PCI Bus                         |
| 000E4000-000E7FFF   | PCI Bus                         |
| 20000000-201FFFFFFF | System board                    |
| 40004000-40004FFF   | System board                    |
| DFA00000-FEFFFFFFF  | PCI Bus                         |
| FED00000-FED003FF   | High precision event timer      |
| FED10000-FED17FFF   | Motherboard resources           |
| FED18000-FED18FFF   | Motherboard resources           |
| FED19000-FED19FFF   | Motherboard resources           |
| FED1C000-FED1FFFF   | Motherboard resources           |
| FED20000-FED3FFFF   | Motherboard resources           |
| FFE40000-FED44FFF   | System board                    |
| FED45000-FED8FFFF   | Motherboard resources           |
| FED90000-FED93FFF   | Motherboard resources           |
| FEE00000-FEEFFFFFFF | Motherboard resources           |
| FF000000-FFFFFFFF   | Intel 82802 Firmware Hub Device |





*Enabling an Intelligent Planet*

## **[www.advantech.com](http://www.advantech.com)**

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2013